



CONCRETE WASHOUT SIGN DETAIL (SEE NOTE NO. 2)

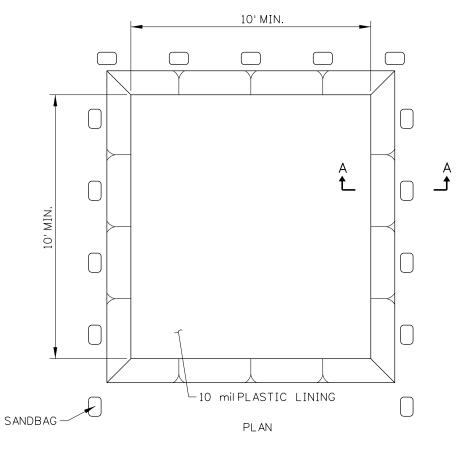

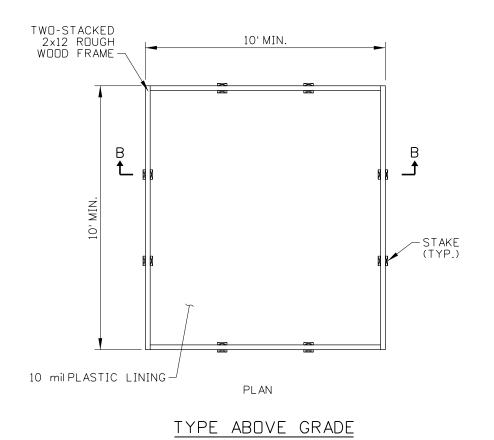

NOTES

- 1. USE THIS DRAWING IN CONJUNCTION WITH THE ITD BEST MANAGEMENT PRACTICES (BMP) MANUAL.
- 2. ACTUAL LAYOUT DETERMINED IN THE FIELD
- 3. INSTALL THE CONCRETE WASHOUT SIGN WITHIN 30 FEET OF THE TEMPORARY CONCRETE WASHOUT FACILITY.
- 4. USE OF PREFABRICATED TEMPORARY WASHOUT MAY ONLY BE USED ON APPROVAL BY THE ENGINEER.
- 5. NOT TO SCALE.

TYPE BELOW GRADE

TRAI	SCALES SHOWN ARE FOR 11" X 17" PRINTS ONLY	REVISIONS									
		BY	DATE	NO.	BY	DATE	NO.	BY	DATE	NO.	
								RDL	11-13	1	
	CADD FILE NAME: 212-16_1113.dgn										
	DRAWING DATE:										
	OCTOBER, 2010										

IDAHO NSPORTATION EPARTMENT BOISE IDAHO

ORIGINAL SIGNED BY: TOM COLE for HIGHWAYS PROGRAM OVERSIGHT ENGINEER ORIGINAL SIGNED BY: TOM COLE

CHIEF ENGINEER

TEMPORARY CONCRETE WASHOUT

STANDARD DRAWING

ORIGINAL STORED AT: ITD, Headquarters 3311 West State Boise, Idaho English

STANDARD DRAWING NO

212-16

SHEET 1 OF 1

